 


## A Quick Guide to Getting Started



### Before you begin

1. Remove all packaging material and tape.
2. Make sure your turntable, microwave and oven racks are in place prior to operating.
3. Set your clock:

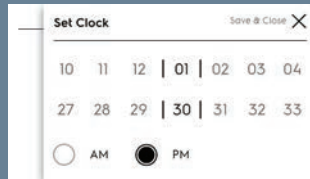

- Touch **ON** | **OFF**, then select Menu Options
- Scroll and select Clock
- Touch Set Clock and set time using graph

4. Prepare your wall oven for first time use by setting Bake at 350° / 177°C for about 30 minutes. It's normal to experience some smoke and noises during this time.



### Download the Electrolux App

Preheat your oven, monitor cook time and control cooking modes such as Air Fry right from your phone.

Scan the QR code below or visit [Electrolux.com/app](https://www.electrolux.com/app).

 


Refer to your Let's Get Connected card in this packet for more information.




### Start Cooking

1. To use the **OVEN**, press **ON** | **OFF** button or touch the screen to get started.
2. Select **Start** to begin a bake cycle at 350° / 177°C or select a different Oven Mode or temperature.

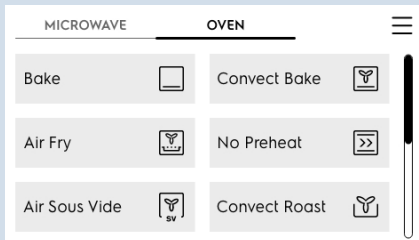

 3. If you select Oven Mode, scroll down to see all of the options.

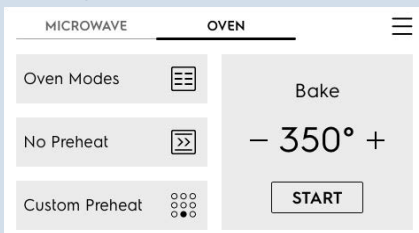


4. The default temperature for the Oven Mode you choose will appear. Use the keypad to change the temperature if needed.
5. Touch **Start**. To cancel cooking anytime, touch **Cancel**.

**TIP:** You may also use the **Timer** to monitor cooking time – unlike **Cook Time** the oven will remain on.

Setting **Cook Time** shuts the oven off once the set time is complete.

For best results, allow your oven to preheat before using **Cook Time**.

1. To use the **MICROWAVE**, press **ON** | **OFF** button or touch the screen to get started.
2. Select **Start** to begin the microwave on High for 30 seconds.

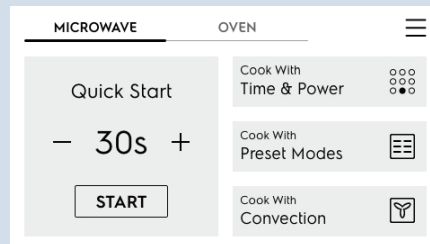 

To enter a specific cook time and change the power setting, select **Cook with Time & Power**.

**Cook with Preset Modes** allows you to choose from ten preset modes to make cooking easier.

**Cook with Convection** bakes and browns using convection cooking conveniently in the microwave.



## Oven Modes

**BAKE** surrounds food with gentle, rising heat to cook delicate foods.

**CONVECT BAKE** uses a fan to circulate heat for quick and even baking.

**AIR FRY** uses the Air Fry Tray to quickly and evenly circulate heated air to deliver crispy, golden results with little to no oil.

**NO PREHEAT** is for single rack baking with packaged and convenience foods.

**AIR SOUS VIDE** uses hot circulating air to preserve nutrients and flavors as your food cooks slowly at low temperatures.

**CONVECT ROAST** uses a convection fan to gently brown meats and seal in the juices.

**BROIL** is for broiling and grilling foods under direct, high heat.

**MULTI-RACKS** is for two rack baking.

**STEAM BAKE** is recommended for baking moist and flavorful breads and pastries for improved browning and flaky crusts.

**STEAM ROAST** is recommended for roasting meat or poultry that results in a crispy outside and juicy inside.

**BREAD PROOF** creates the perfect environment to activate yeast when baking homemade breads.

**KEEP WARM** is used to keep cooked foods at serving temperature (140°F / 60°C to 200°F / 93°C) in the oven.

**DEHYDRATE** uses the Air Fry Tray to circulate air around the food for faster preservation.

**DELAY START** allows a delayed starting time only for Bake, Convection Bake, No Preheat, Convection Roast, Steam Clean and Self Clean.

**FOOD PROBE** monitors the internal temperature of large cuts of meat with a probe. An alert will sound once the desired set target temperature is reached.

**COOK TIME** counts down your set cooking time and shuts off oven when complete.

**NOTE:** Monitor foods when using Air Fry and Steam Bake and Roast since they may cook foods faster than traditional bake.

## Oven Modes Highlights

- Use **Air Sous Vide** to create dishes that you would have made using a traditional sous vide water bath or a slow cooker.
- **Steam Bake & Roast** uses the power of steam for fluffier baked goods and juicy meats that are tender on the inside and crispy on the outside. Before using Steam, slowly pour 3 cups of water into the bottom of the oven while still cool.
- Bake with ease with the **Air Fry** feature. Get crispier foods without all the oil.
  - For best results, use the **Air Fry Tray** on rack position 3.
  - Place a cookie sheet on rack position 1 to catch any crumbs.

For more cooking and rack position tips, refer to your Use & Care Manual.

## Care and Cleaning

Protect your microwave and wall oven by quickly cleaning up spills when they happen.

- Clean with a soft cloth, mild dish detergent and water or a 50/50 solution of vinegar and water.
- Avoid spraying large amounts of water or cleaners directly on the oven control and display area. Excess moisture on the control area may cause damage.
- Avoid using scouring pads or paper towels - they will damage the finish.

## Choose Your Clean

### FOR LIGHT SOILS, USE STEAM CLEAN

Steam Clean is a chemical-free method that uses 1 cup of water poured in the oven cavity to clean light soils.

### FOR HEAVY SOILS, USE SELF CLEAN

Self Clean use high temperatures to eliminate heavier soils and reduces them to a powdered ash you can wipe away.

 
Remember to remove all racks and accessories from your wall oven before starting a Self Clean cycle. Always refer to your Use & Care Manual for more tips and instructions. Visit the [ElectroluxUS](https://www.electrolux.com) channel on YouTube to access helpful how-to videos.

## FAQs

- **Why does my wall oven make noises when I'm cooking?**  
Temperature changes during preheat and cool-down can make parts of the wall oven expand and contract. The controls click as they work to create even cooking temperatures. Different fans run to heat up the oven or cool down different parts of oven, even when it's off. These sounds are normal.
- **This oven doesn't work like my old one. Is this normal?**  
As you get used to a new wall oven, you may need to test and adjust cooking times and temperatures for your recipes. Your Use & Care Manual has rack position and bakeware recommendations to help you get the best baking results. For instructions on oven temperature calibration, consult your Use & Care Manual or call us if you need help.
- **Why does my oven smoke when I use Air Fry?**  
Air Fry circulates heated air all around food and bakeware. Some smoke is normal. Drippings from high-fat or greasy foods combined with hot air from the oven can cause smoke to occur. Visit [Electrolux.com](https://www.electrolux.com) for additional FAQs and Air Fry Tips.

## Sustainability, together

We're committed to more sustainable eating from how we store foods to how we prepare them.

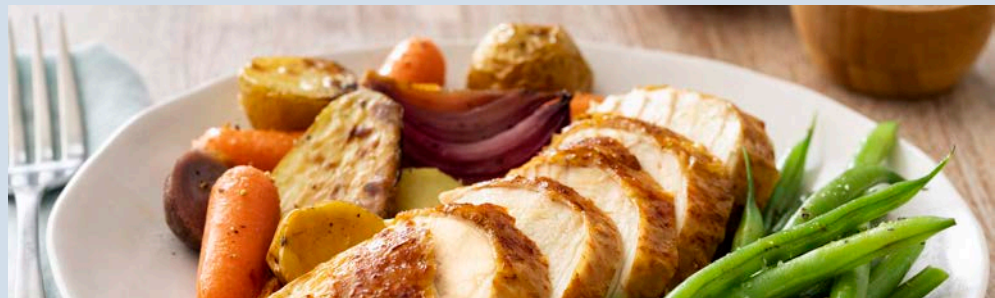

### Peace of Mind & Protection

Discover more benefits by registering your appliance. Text the photo icon on your appliance or registration card, or visit us online to register.

[Electrolux.com](https://www.electrolux.com)

(877) 435-3287

10200 David Taylor Drive  
Charlotte, NC 28262

[Electrolux.ca](https://www.electrolux.ca)

(800) 265-8352

5855 Terry Fox Way  
Mississauga, ON L5V 3E4